

[Home](#)

[Back to Highneckvest page](#)





Bonding line Aa


n Line

Bonding line AA

Bonding line AA

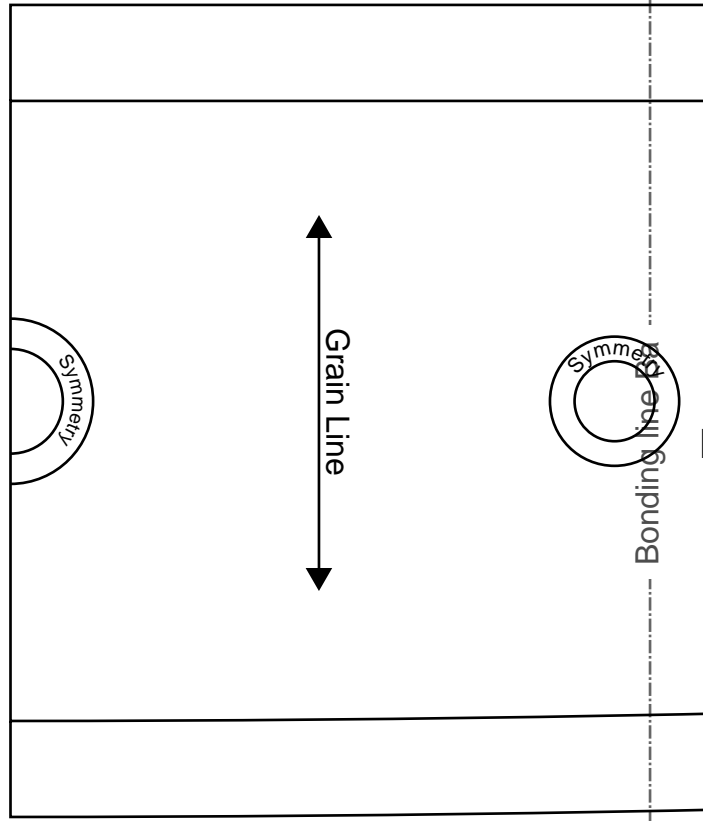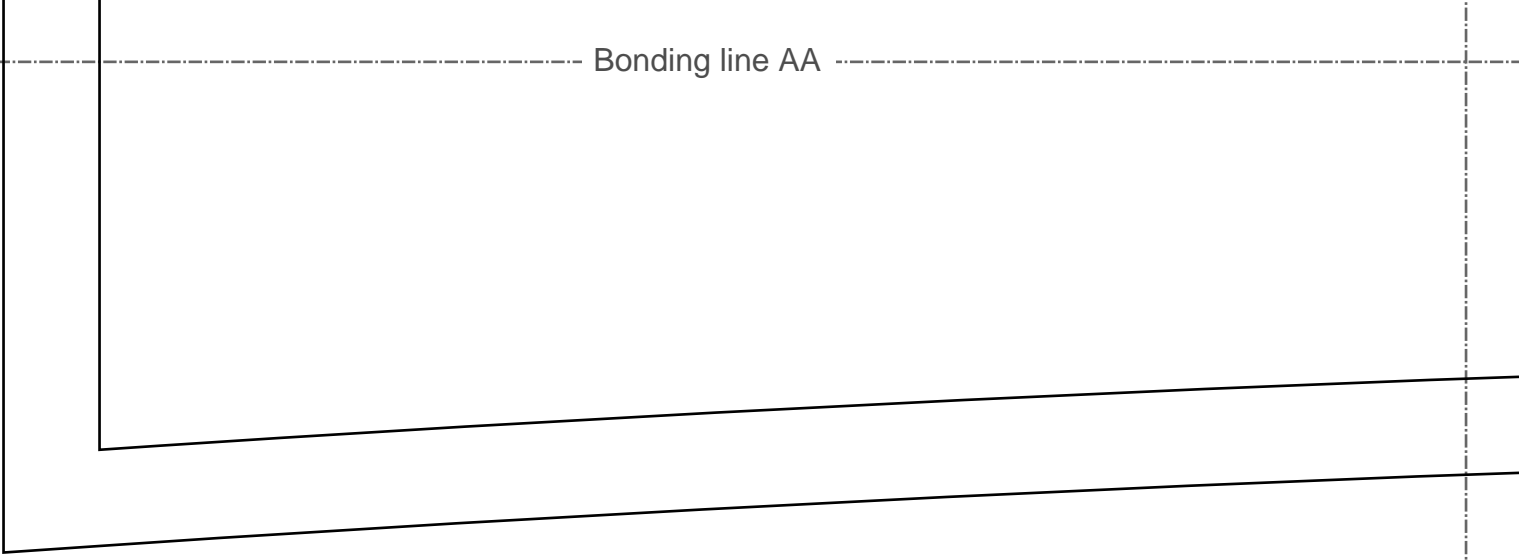

Bonding line AB

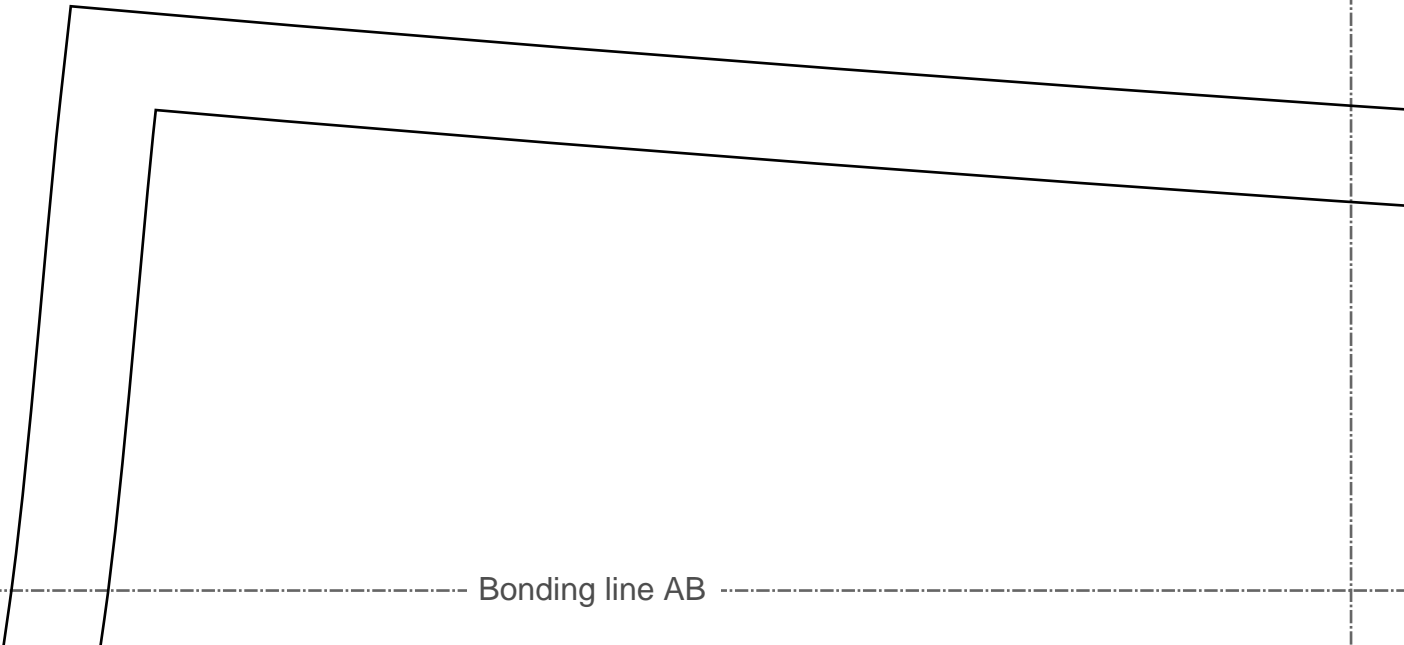


Bonding line AB

Pocket position

— Baste


Bonding line Ca

Bonding line AC

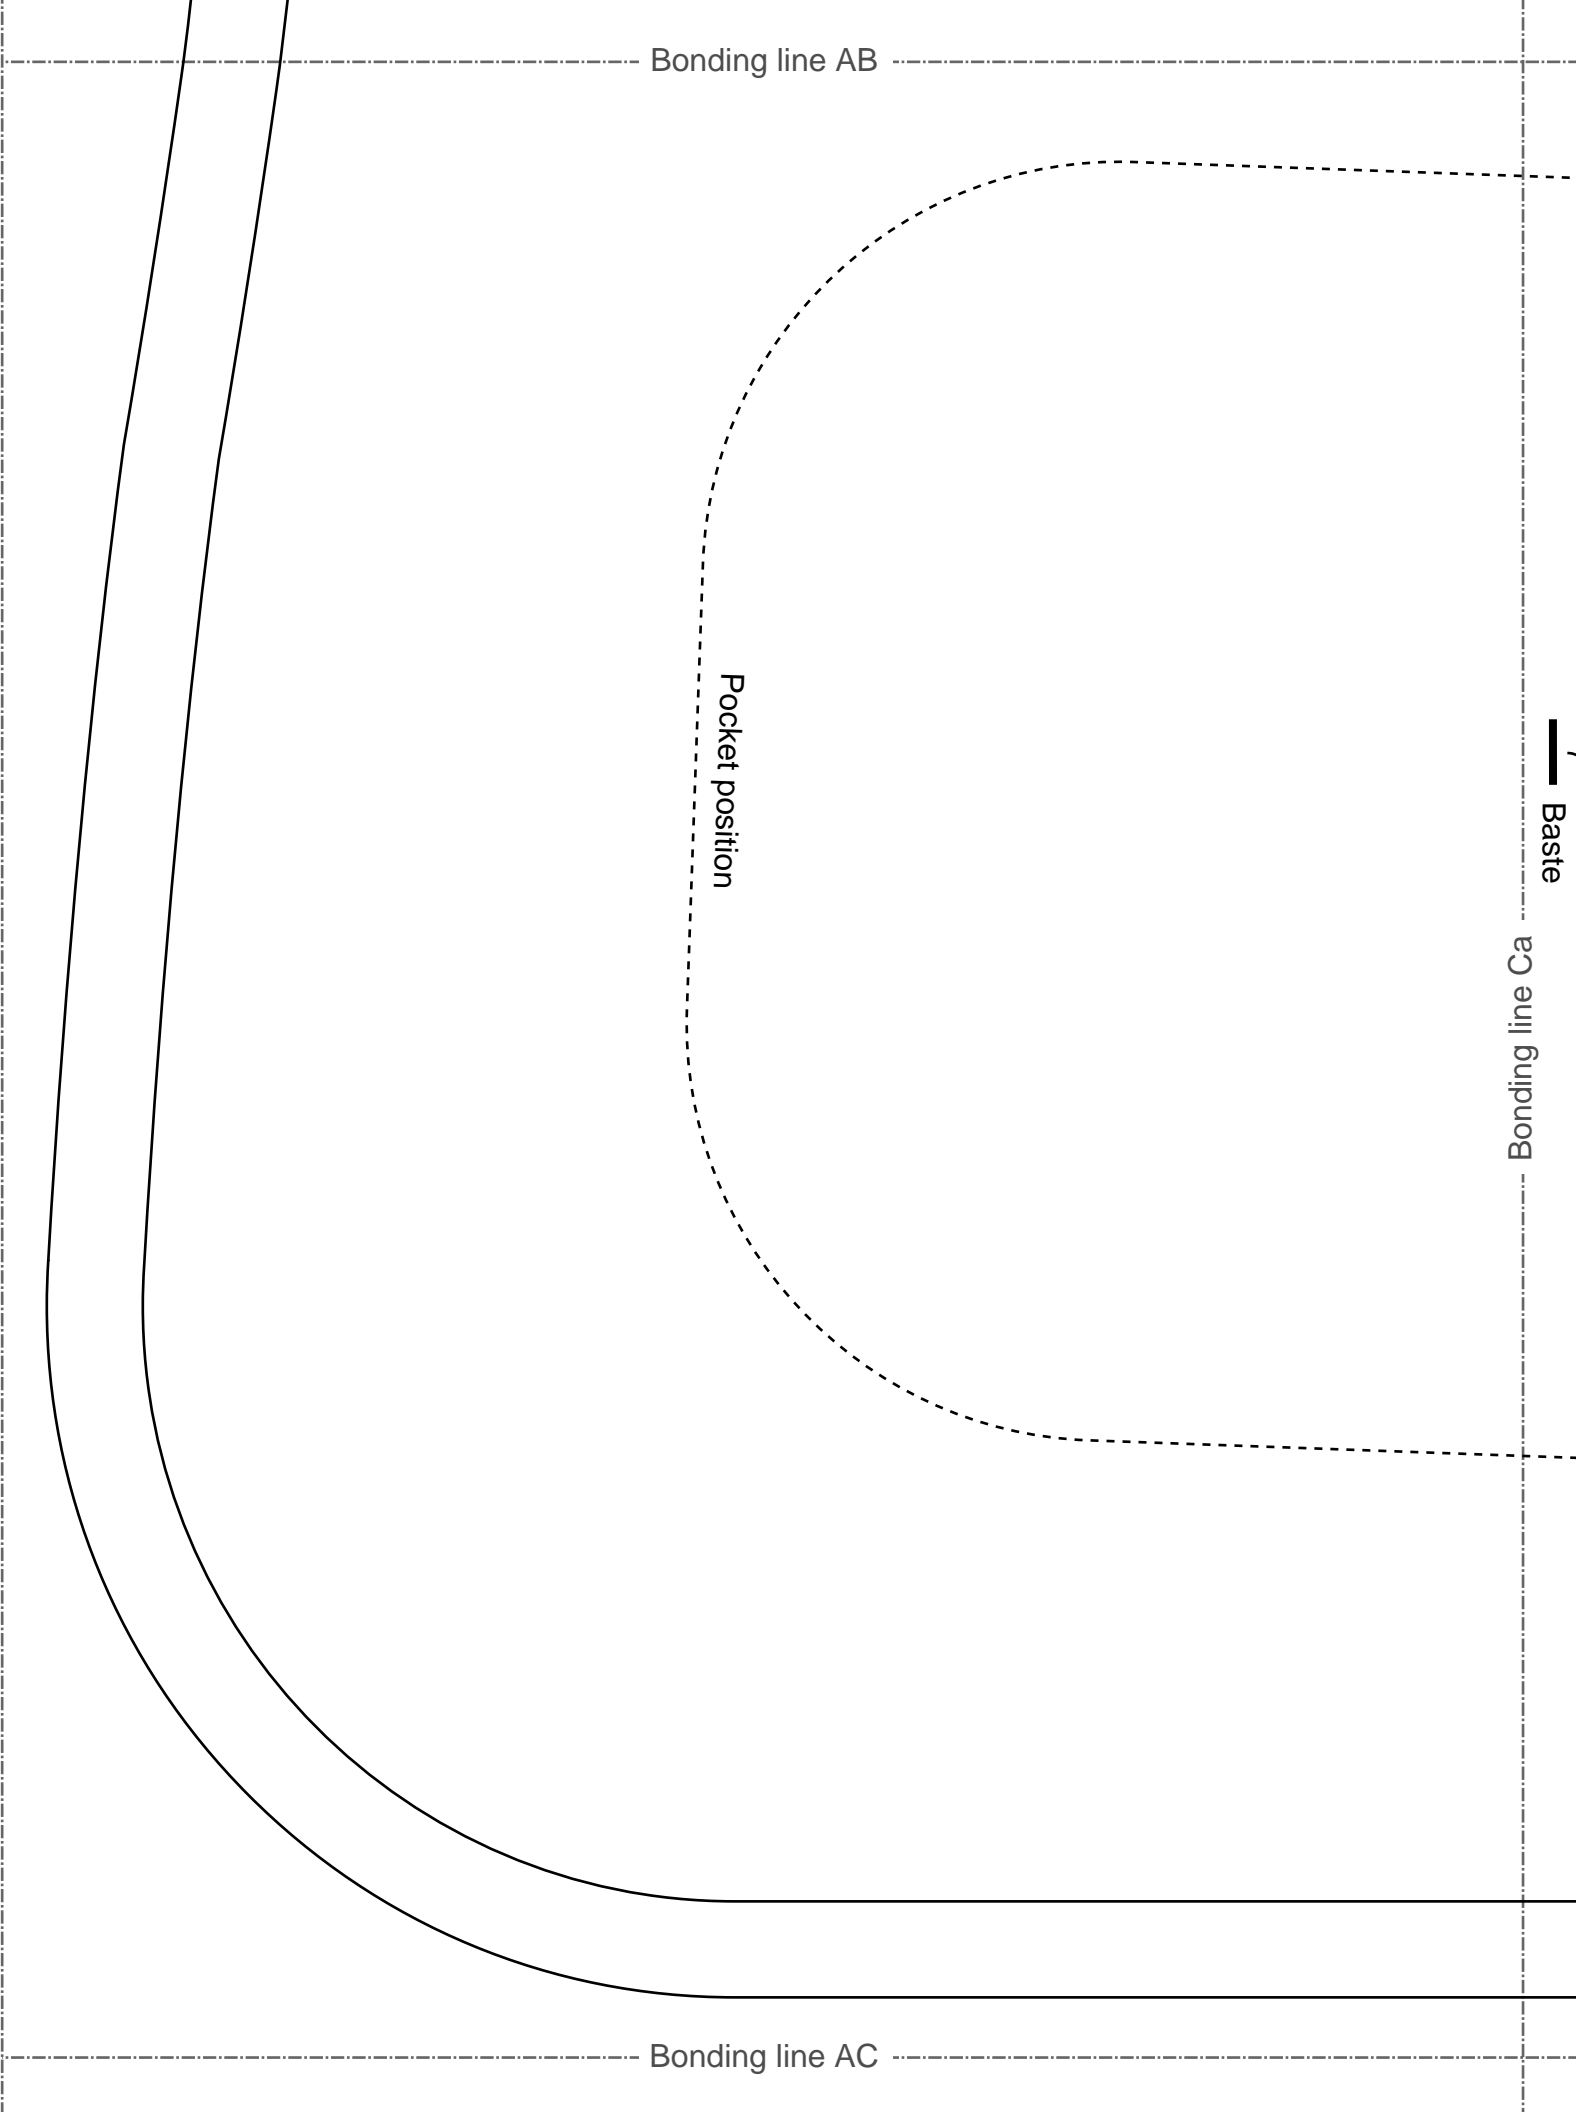

MEN'S size


Bonding line Ab

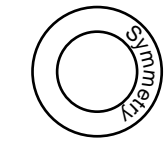

Highneckvest
Back Body
one sheets

Bonding line BA


Bonding line Aa



Bonding line BA

Seam allowance 1/2in.

Highneckvest
Collar
one sheets
Fusible interlining
one sheets

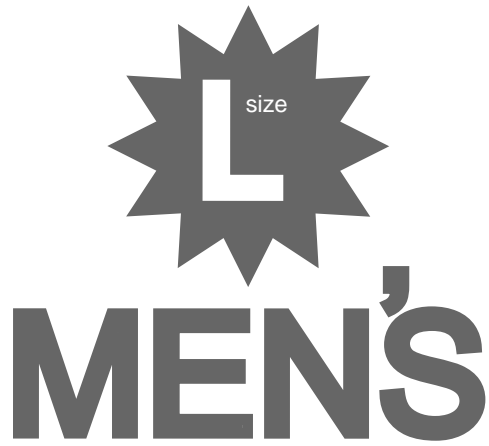

Seam allowance 1/2in.

Bonding line BB


Bonding line Bb


Bonding line Bb

Front Body
two sheets

Bonding line BB

Bonding line BC

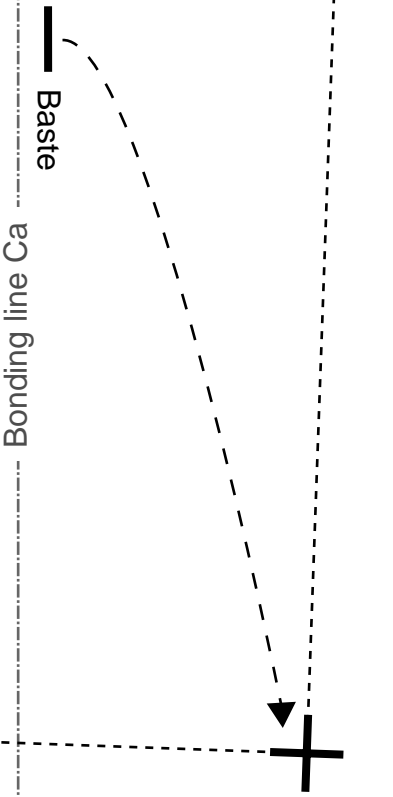

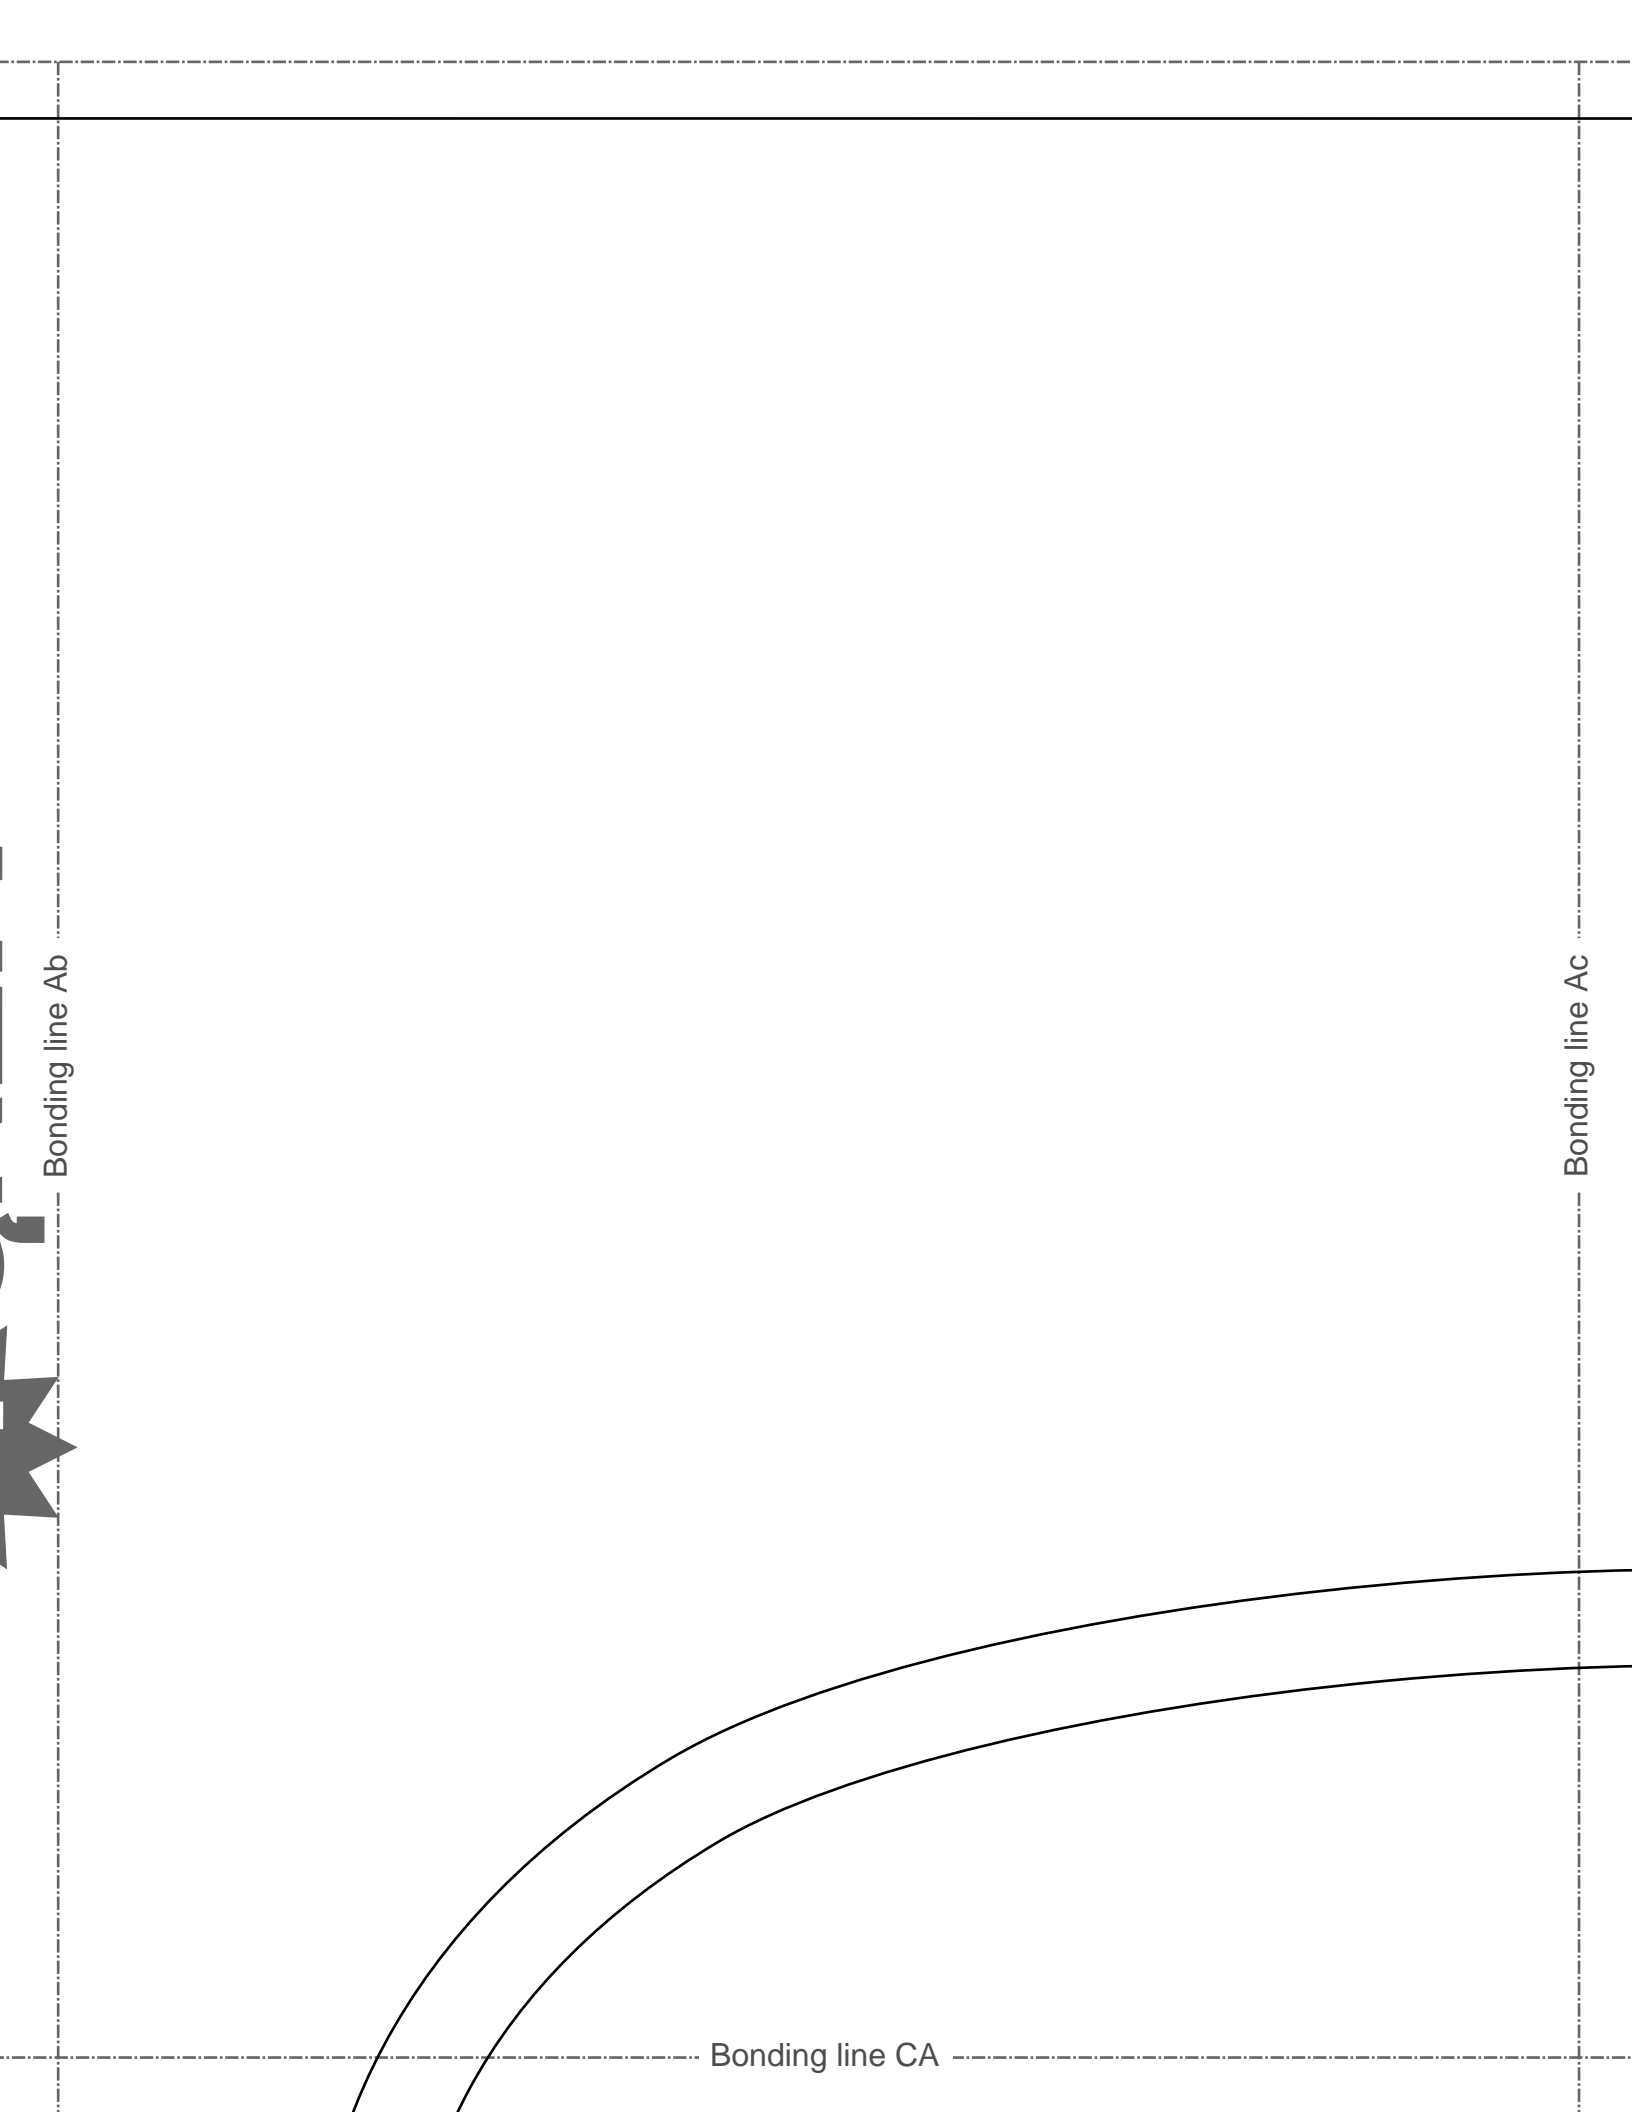

Bonding line Ab

Bonding line Ac

Bonding line CA

Bonding line CA

Bonding line Bb

Bonding line CB

Bonding line Bc

Highneckvest Pocket two sheets

DRCOS

SITE <http://dr-cos.info/en> | <http://dr-cos.com/fp>
MAIL info@dr-cos.com
Twitter [@drcos_com](https://twitter.com/@drcos_com)
facebook <https://www.facebook.com/drcoscom>

Bonding line CB

Bonding line Cc

Bonding line CC

MEN'S
IG
size

Highneckvest


Front Body

two shafts

Bonding line Ac

Bonding line Ad

Bonding line DA

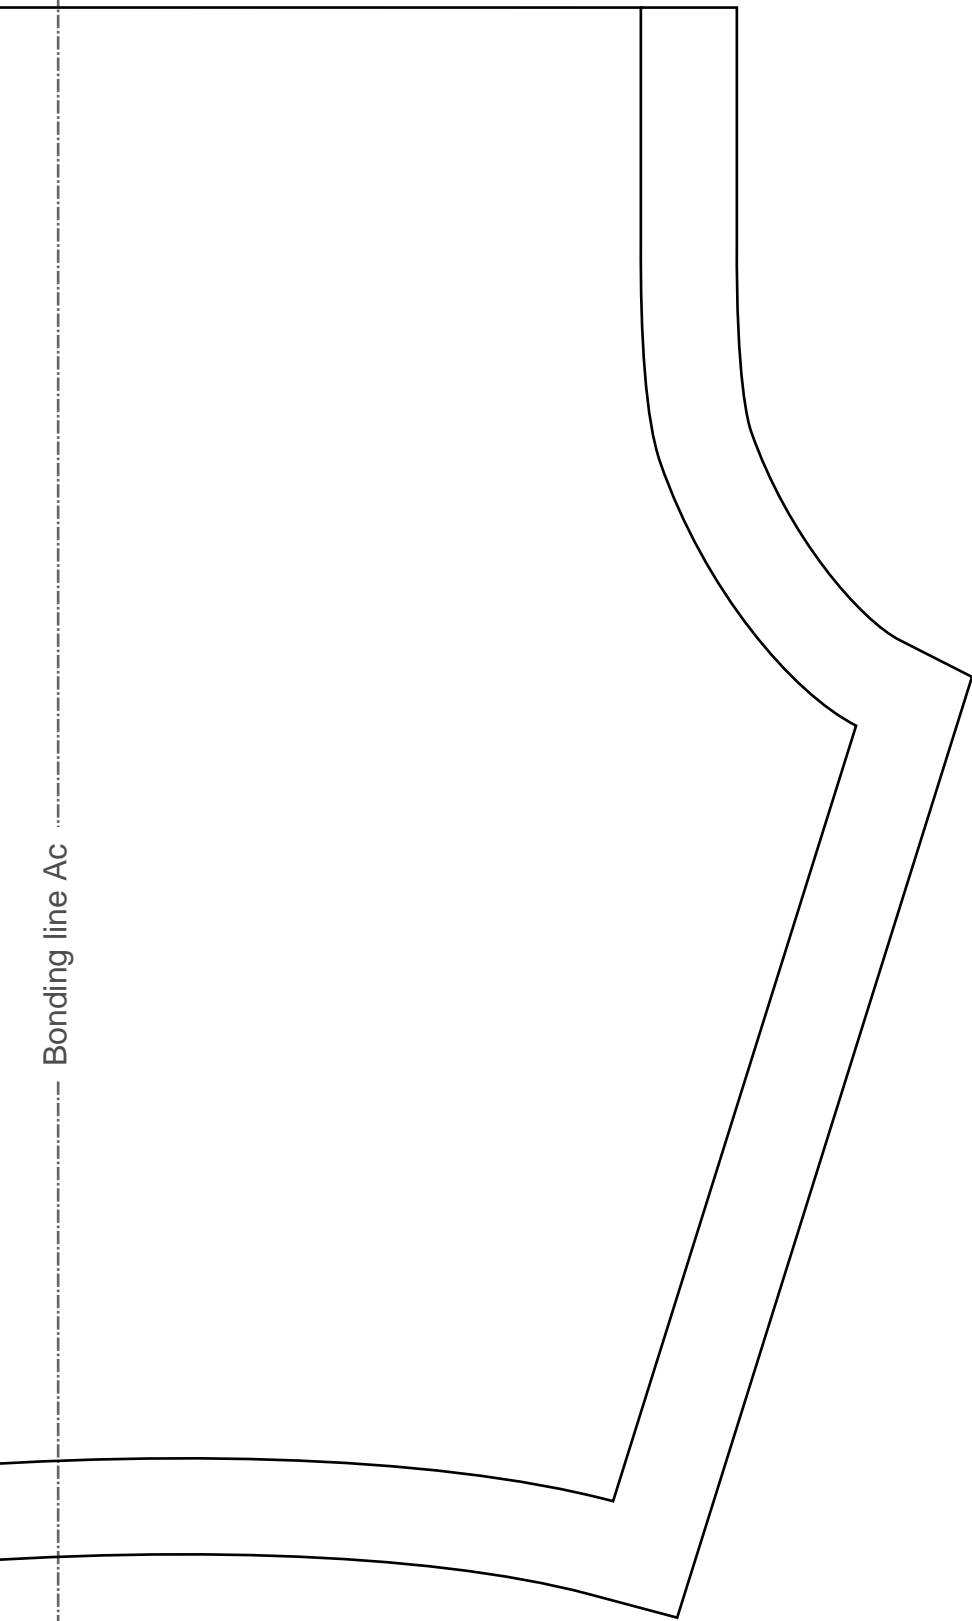

Bonding line DA

Stitch line

Bias line

Grain Line

Bonding line Bc

Fold in half

Bonding line Bd

MEN'S  size

Bonding line DB

Bonding line DB

Bonding line Cc

Bonding line Cd

Bonding line DC

