

[Home](#)
[Back to Tophat page](#)



**Tophat
Side
one sheets**

Bonding line Aa

Bonding line AA

Bonding line AA

match marks




Seam allowance 1/2in.

**Tophat
Brim**
two sheets

Bais

Bonding line Ba

Grain Line

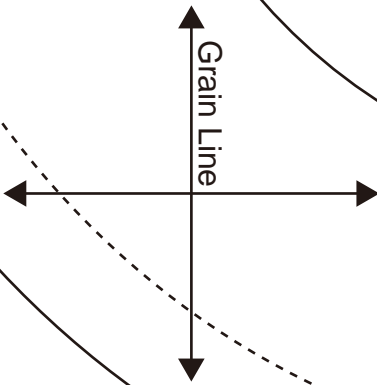


match marks



Bonding line AB

Bonding line Aa

match marks

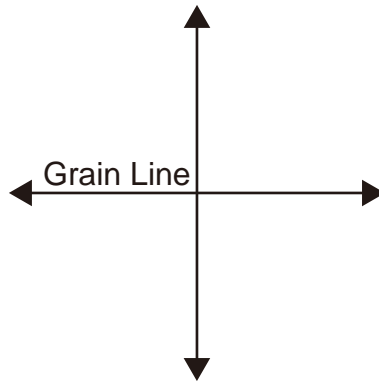

match marks




How to make

Sorry if I haven't
in English. You

- 1.iron on the int
- 2."side" is sew r
- 3."top" and "sid
- 4."brim" is sew
- The surface and
- 5.two "brims" ar
- 6.In a "brim", bi
7. "side" "brim"

Bonding line BA

Bonding line BA

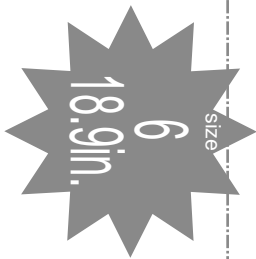

**Tophat
Brim**
interfacing(heavy weight)
two sheets

Bonding line Bb

DRCOS
SITE <http://dr-cos.com>
MAIL info@dr-cos.com
Twitter [@drcos.com](https://twitter.com/@drcos.com)
facebook <https://www.facebook.com/drcoscom>

Bonding line Ba

match marks




Bonding line

S



Bonding line Ca

Bonding line Cb

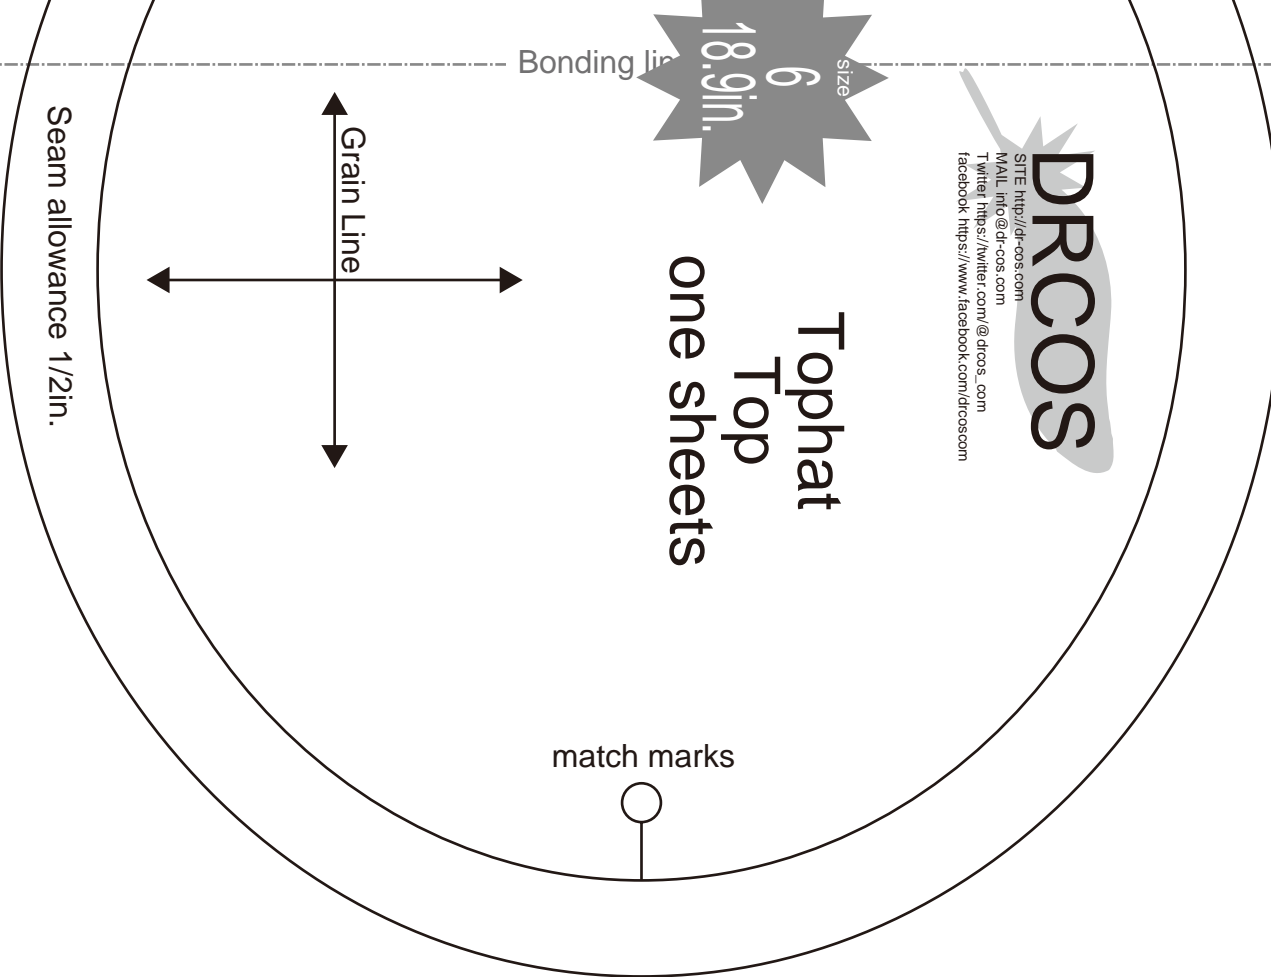

Bonding line BC



make

I haven't made myself understood (well)
ish. You know I'm poor at English.

on the interfacing(heavy weight) to "top" "side" "brim"
is sew up and loop
and "side" sew pieces
is sew up and loop
face and the back are same.
"rims" are sewn up by a dotted line.
"rim", bias (A wire is put in.)
"brim" is sewn up.

Seam allowance 1/2in.

Bonding line Ac

Bonding line CA

Bonding line CA



Bonding line Bb

DRCOS
SITE <http://dr-cos.com>
MAIL info@dr-cos.com
Twitter <https://twitter.com/drcos.com>
facebook <https://www.facebook.com/drcoscom>

Bonding line Bc

Bonding line CB

Bonding line Ac

Bonding line Ad

one she
interfacing(heavy
Side
Toph



Bonding line D

DRCOS
SITE <http://dr-cos.com>
MAIL info@dr-cos.com
TWITTER [@drcos_com](https://twitter.com/@drcos_com)
FACEBOOK <https://www.facebook.com/drcoscom>

size
6
18.9in.

phat
Side
ng (heavy weight)
e sheets

Bonding line Bc

Bonding line Bd

Bonding line DB