



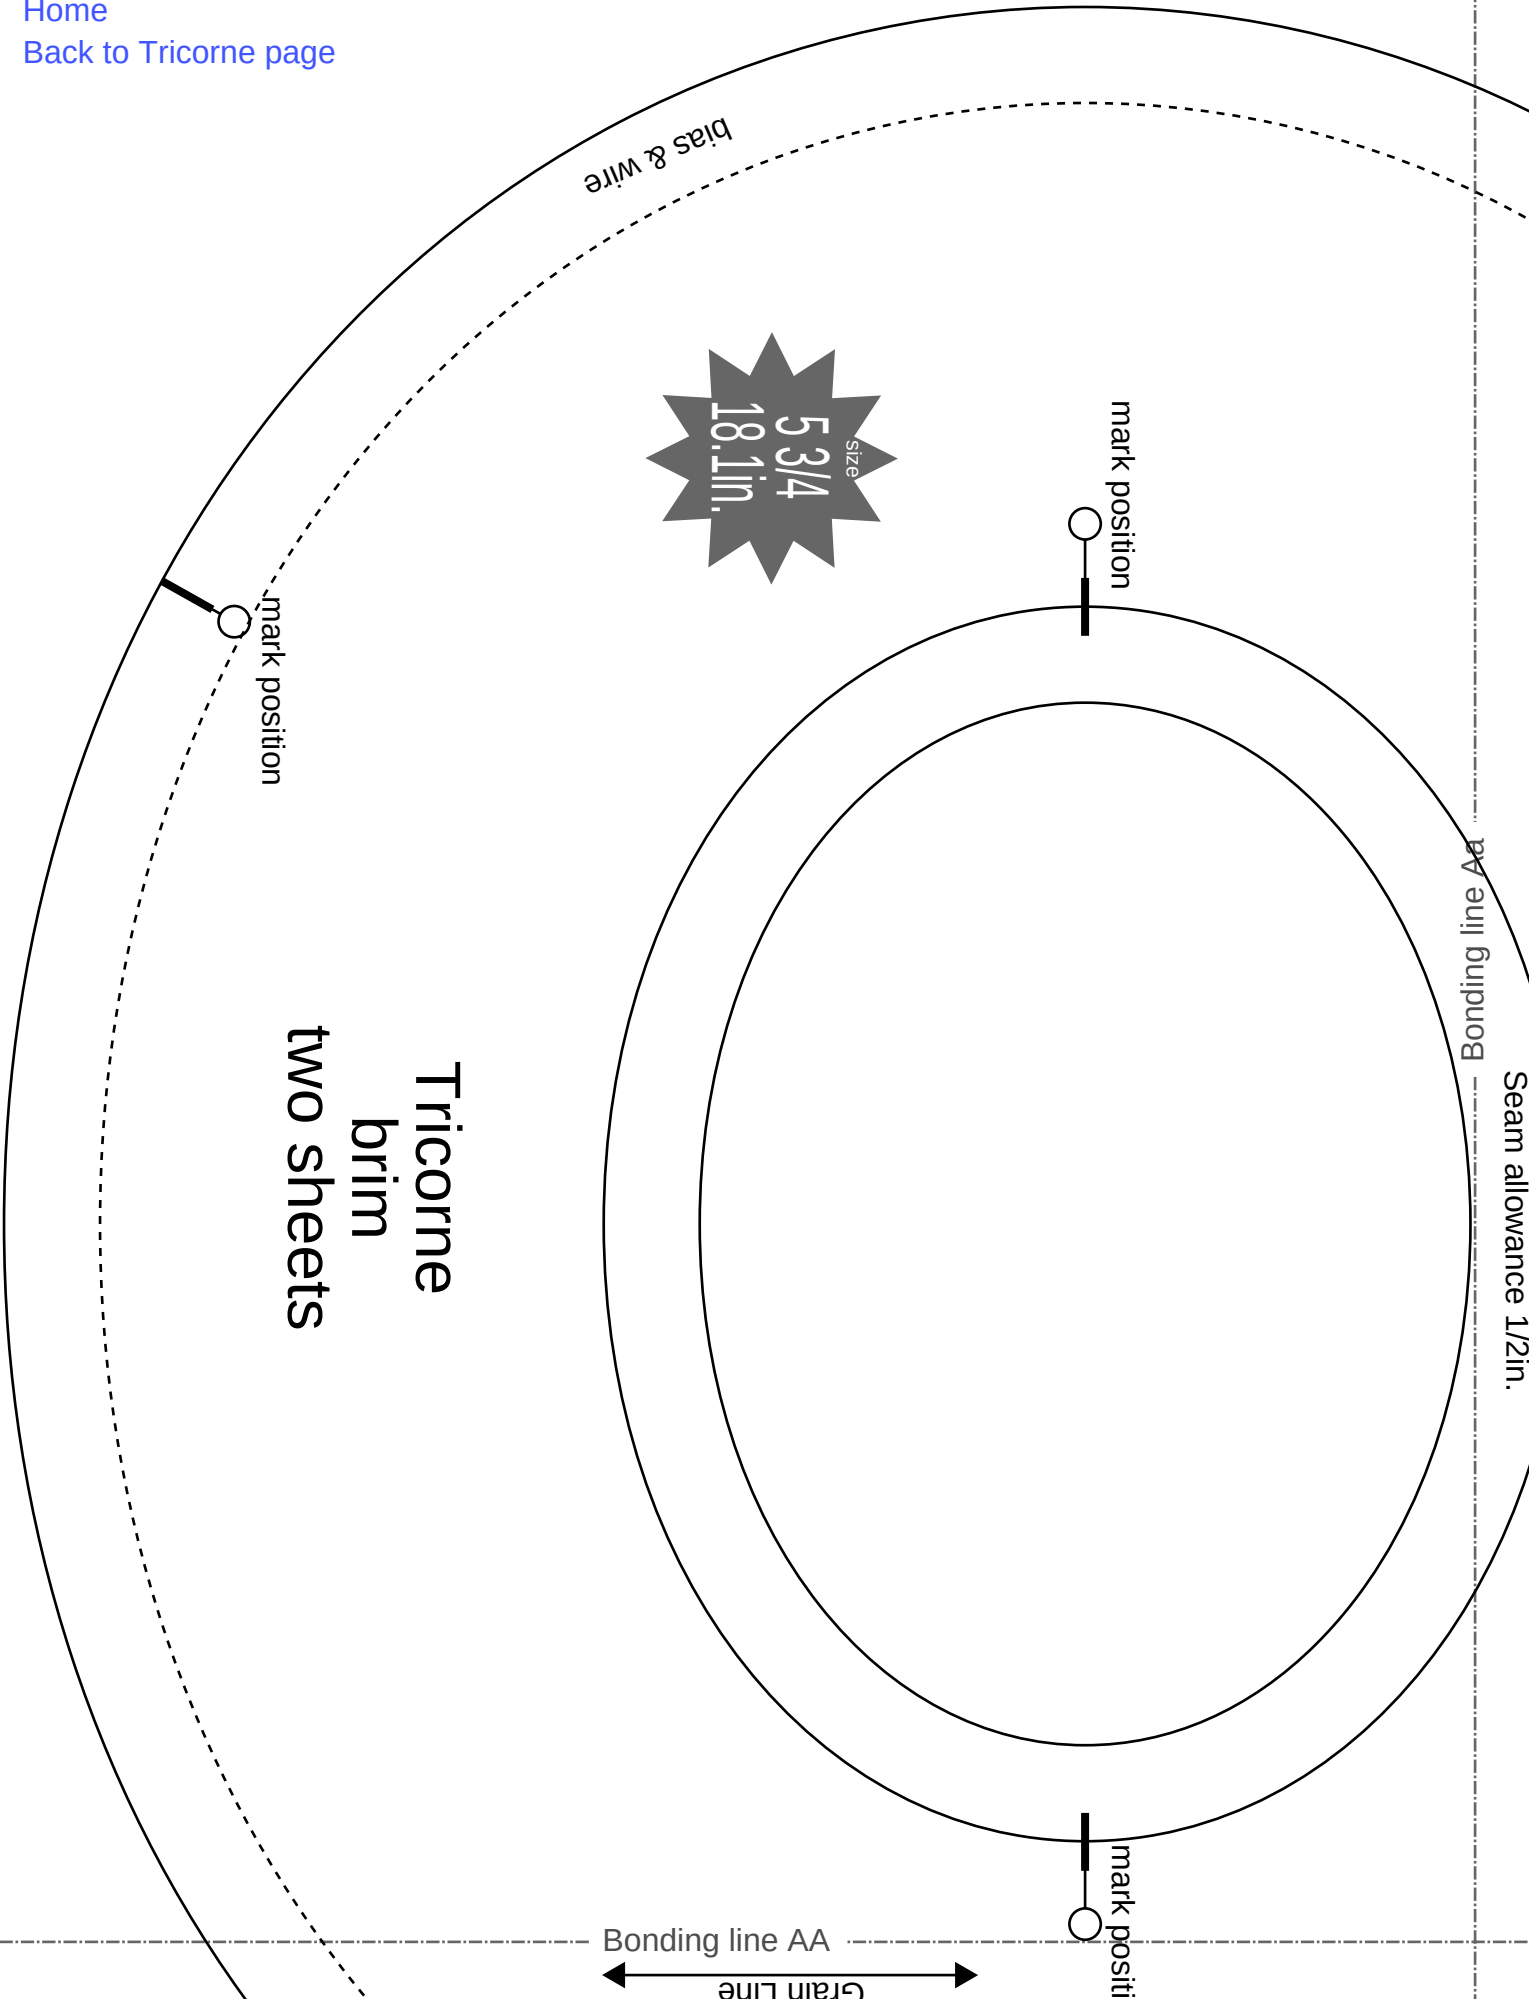

Bonding line AA



Grain Line

mark position

mark position

size
5 3/4
18.1in.

Bonding line Ba
interfacing
on

Bonding line AB

8. Align the sewing position and sew.

Bonding line Ab

2

Tricorne
brim
interfacing(heavy weight)
two sheets

Bonding line BA

mark position

Bonding line Aa

Seam allowance 1/2in.

DRCOS

SITE <http://www.dr-cos.info/>
MAIL info@dr-cos.com
Twitter [@drcos_com](https://twitter.com/@drcos_com)
facebook <https://www.facebook.com/drcoscom>

Bonding line BA

Bonding line Ba

Tricorne
side
Facing (heavy weight)
one sheets

DRCOS

SITE <http://www.dr-cos.info/>
MAIL info@dr-cos.com
Twitter [@drcos_com](https://twitter.com/@drcos_com)
facebook <https://www.facebook.com/drcos>

Bonding line BB

Bonding line BB



How to make

Sorry if I haven't made myself understood (well) in English. You know I'm poor at English.

- 1.iron on the interfacing(heavy-weight) to "top" "side" "brim"
- 2."side" is sew up and loop
- 3."top" and "side" sew pieces
- 4."brim" is sew up and loop
- The surface and the back are same.
- 5.two "brims" are sewn up by a dotted line.
- 6.In a "brim", bias (A wire is put in.)
7. "side" "brim" is sewn up.
- 8.Align the sewing position and sew.

DRCOS

SITE <http://www.dr-cos.info/>
 MAIL info@dr-cos.com
 Twitter [@drcos_com](https://twitter.com/@drcos_com)
 facebook <https://www.facebook.com/drcoscom>

Tricorne
 top
 interfacing(heavy weight)
 one sheets




Bonding line CA



DRCOS

info/
@drcos_com
ebook.com/drcoscom

Bonding line Bc

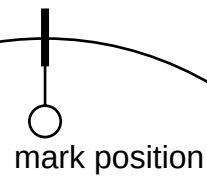


DRCOS

SITE <http://www.dr-cos.info/>
MAIL info@dr-cos.com
Twitter https://twitter.com/@drcos_com
facebook <https://www.facebook.com/drcoscom>



Tricorne
Top
two sheets

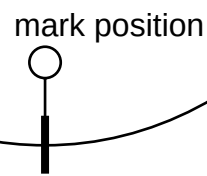

Seam allowance 1/2in.

Bonding line Bc

Bonding line CB

