

[Home](#)
[Back to UVhat page](#)

UV Hat
Brim
interfacing (heavy weight)
one sheets

Bonding line AA

Bonding line Aa


Bonding line AA

Bonding line Ba

Grain Line



UV Hat
Side
one sheets

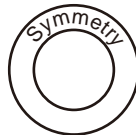

DRCOS

SITE <http://dr-cos.com>
 MAIL info@dr-cos.com
 Twitter https://twitter.com/@drcos_com
 facebook <https://www.facebook.com/drcoscom>

Seam allowance 1/2in.

Bonding line AB

Bonding line Aa

Bonding line Ab





Bonding line BA

Bonding line BA

Bonding line Ba


Bonding line Bb

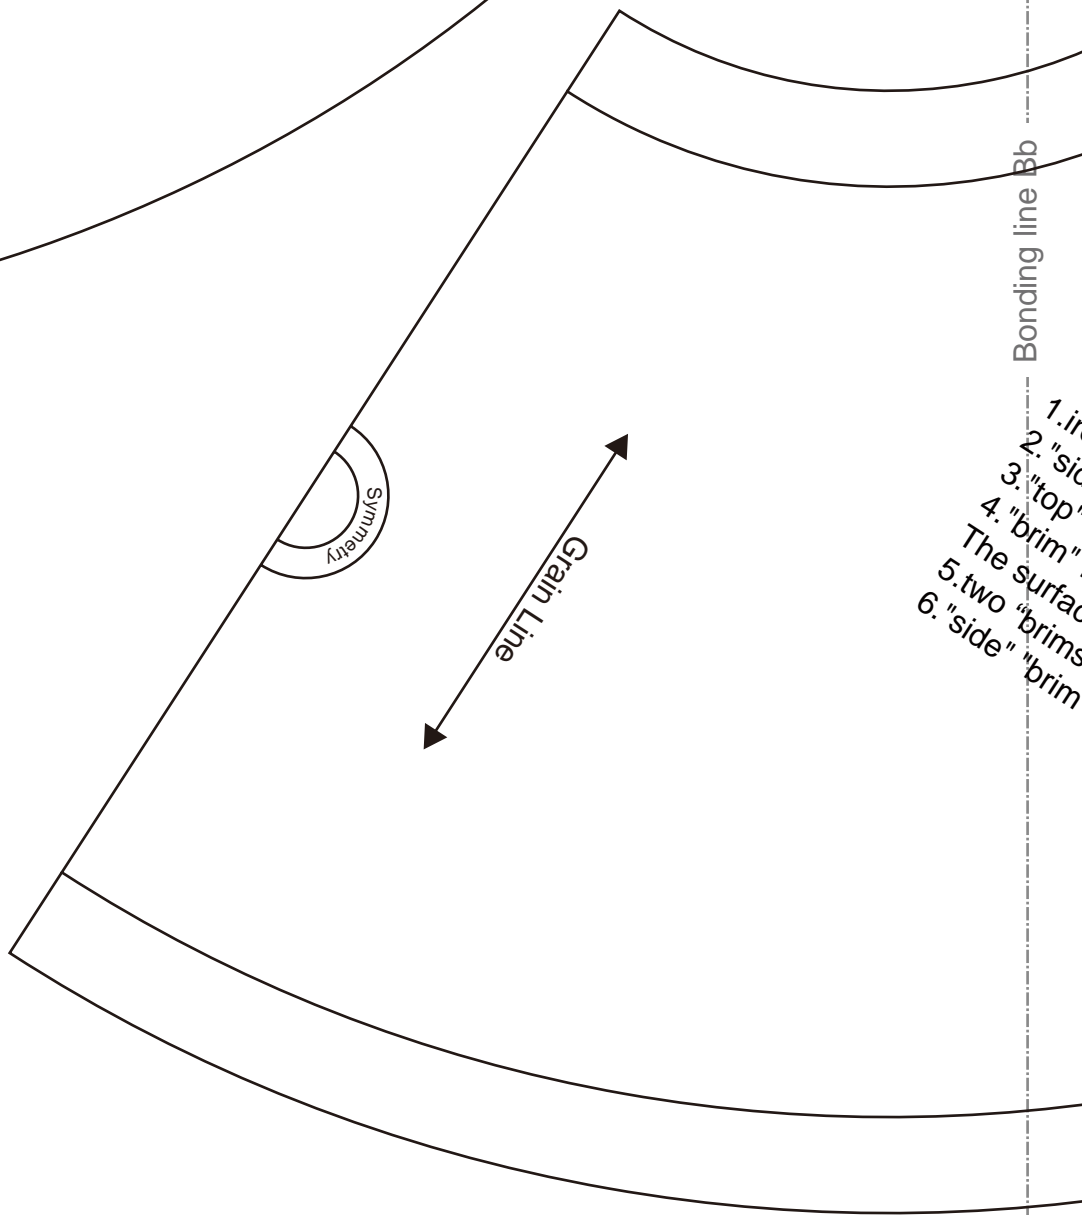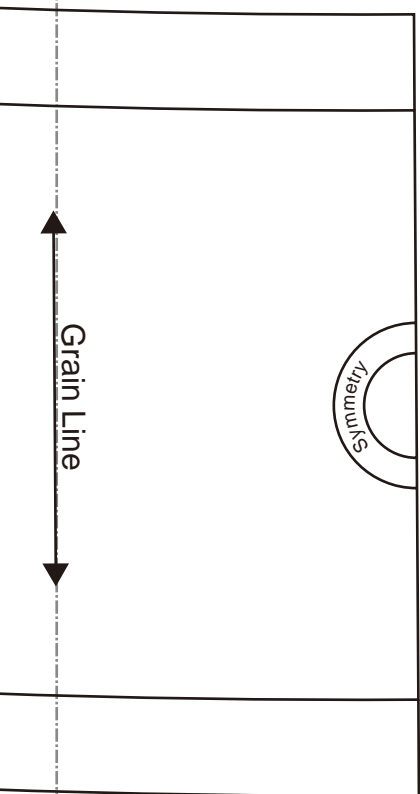

Bonding line BB


- 1. in
- 2. "side"
- 3. "top"
- 4. "brim"
- The surface
- 5. two "brims"
- 6. "side" "brim"

Bonding line Ab

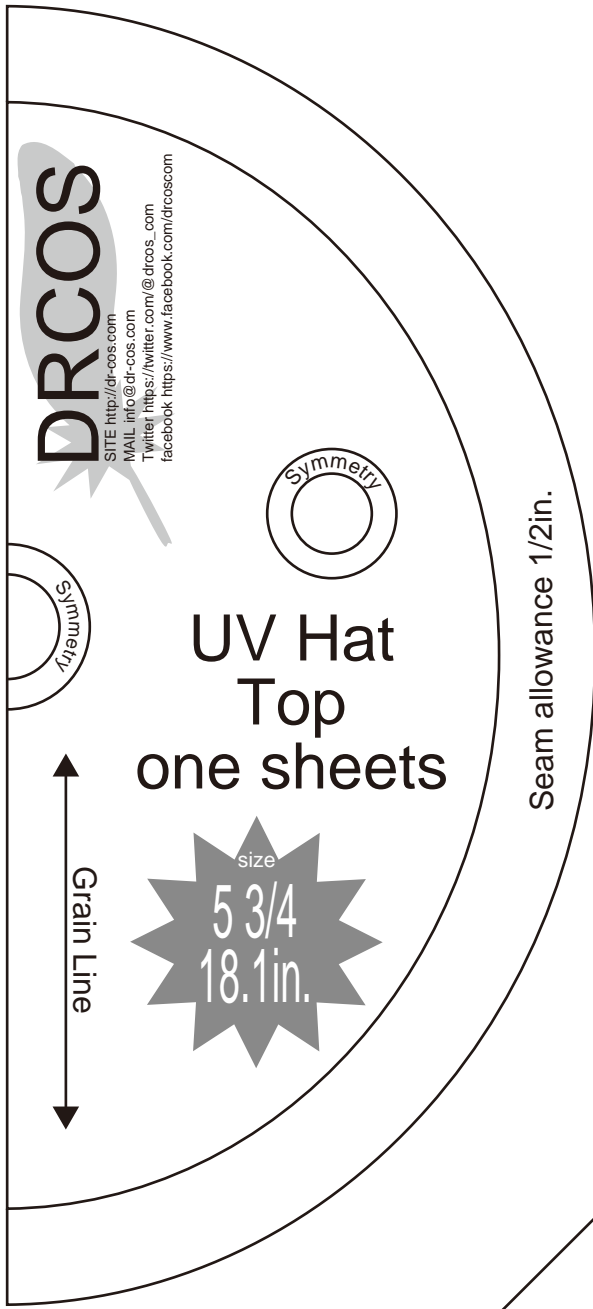


Seam allowance 1/2in.

Bonding line Ac

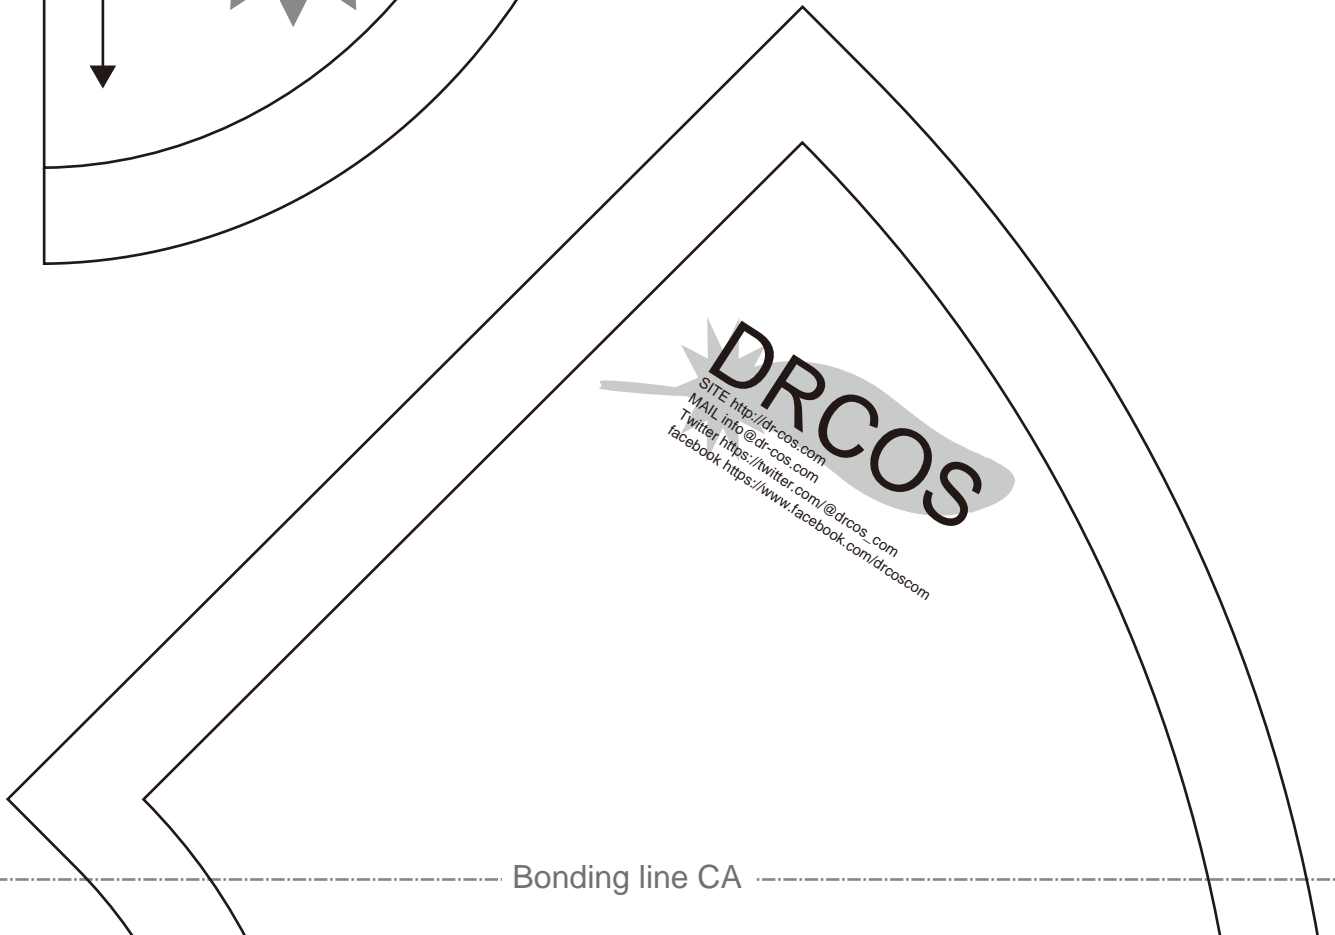

Bonding line CA

Bonding line CA

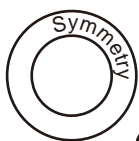

UV Hat Brim two sheets

How to make

Sorry if I haven't made myself understood (well) in English. You know I'm poor at English.

1. iron on the interfacing (heavy weight) to "Brim"
 2. "side" is sewn up and loop
 3. "top" and "side" sew pieces
 4. "brim" is sewn up and loop
- The surface and the back are same.
two "brims" are sewn up
"side" "brim" is sewn up.

Seam allowance 1/2in.

Bonding line Bb

Bonding line Bc

Bonding line CB