

Bonding line AA

Bonding line Ba

Bonding line AB

18.1in.

Tophat Brim

interfacing(heavy weight)
two sheets

DRCOS

SITE <http://dr-cos.com>
MAIL info@dr-cos.com
Twitter https://twitter.com/@drcos_com
facebook <https://www.facebook.com/drcoscom>

size

5 3/4
18.1in.

Tophat Top

interfacing(heavy weight)
two sheets



match marks

DRCOS

SITE <http://dr-cos.com>
MAIL info@dr-cos.com
Twitter https://twitter.com/@drcos_com
facebook <https://www.facebook.com/drcoscom>


size

5 3/4
18.1in.

Tophat Top

Bonding
one sheet

Grain Line

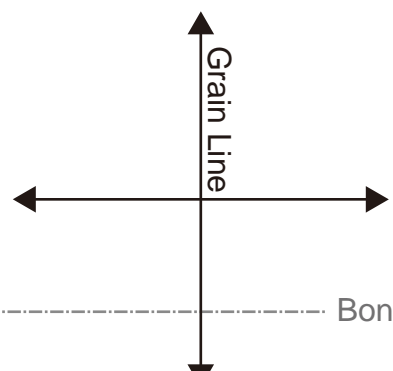

Seam allowance 1/2in.

DRCOS

SITE <http://dr-cos.com>
MAIL info@dr-cos.com
Twitter https://twitter.com/@drcos_com
facebook <https://www.facebook.com/drcoscom>

1/2in.

Bonding

Top
Tophat
sheets

dficos_cpm
ook.com/dficoscom

OS

match marks



Bonding line Ba

Bonding line Bb



**Tophat
Side**

interfacing(heavy weight)
one sheets

Bonding line BB

Bonding line Ac

DRCOS

SITE <http://dr-cos.com>
MAIL info@dr-cos.com
Twitter <https://twitter.com/dr-cos.com>
facebook <https://www.facebook.com/drcoscom>

Bonding line CA

SIZE

5 3/4

18.1in.

Top hat

Primo

Bonding line CA

DRCOS

SITE <http://dr-cos.com>
MAIL info@dr-cos.com
Twitter https://twitter.com/@drcos_com
facebook <https://www.facebook.com/drcoscom>



Bonding line Bb

size
5 3/4
18.1in
Bb


Top
Side
one she

Bonding line CB

Bonding line DA

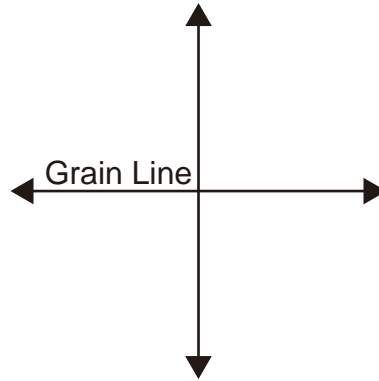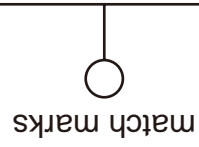

Bonding line Bd

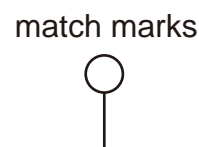

Bonding line DB

Size
5 3/4
18.1in.

Tophat
Side
e sheets



How to make

Sorry if I haven't made myself understood (well) in English. You know I'm poor at English.

- 1.iron on the interfacing(heavy weight) to "top" "side" "brim"
 - 2."side" is sew up and loop
 - 3."top" and "side" sew pieces
 - 4."brim" is sew up and loop
- The surface and the back are same.
- 5.two "brims" are sewn up by a dotted line.
 - 6.In a "brim", bias (A wire is put in.)
 7. "side" "brim" is sewn up.

Seam allowance 1/2in.