

Bonding line Aa
Westernhat



DRCOS
SITE <https://dr-cos.info/en> <https://dr-cos.com/jp>
MAIL info@dr-cos.com
Twitter https://twitter.com/@drcos_cqm
pinterest <https://www.pinterest.jp/drcosinfo>




Westernhat
brim
interfacing(heavy weight)
two sheets

DRCOS
SITE <https://dr-cos.info/en> <https://dr-cos.com/jp>
MAIL info@dr-cos.com
Twitter https://twitter.com/@drcos_cqm
pinterest <https://www.pinterest.jp/drcosinfo>

a line AA

<https://dr-cos.info>
<https://dr-cos.com/jp>
MAIL info@dr-cos.com
Twitter https://twitter.com/@drcos_cqm
pinterest <https://www.pinterest.jp/drcosinfo>

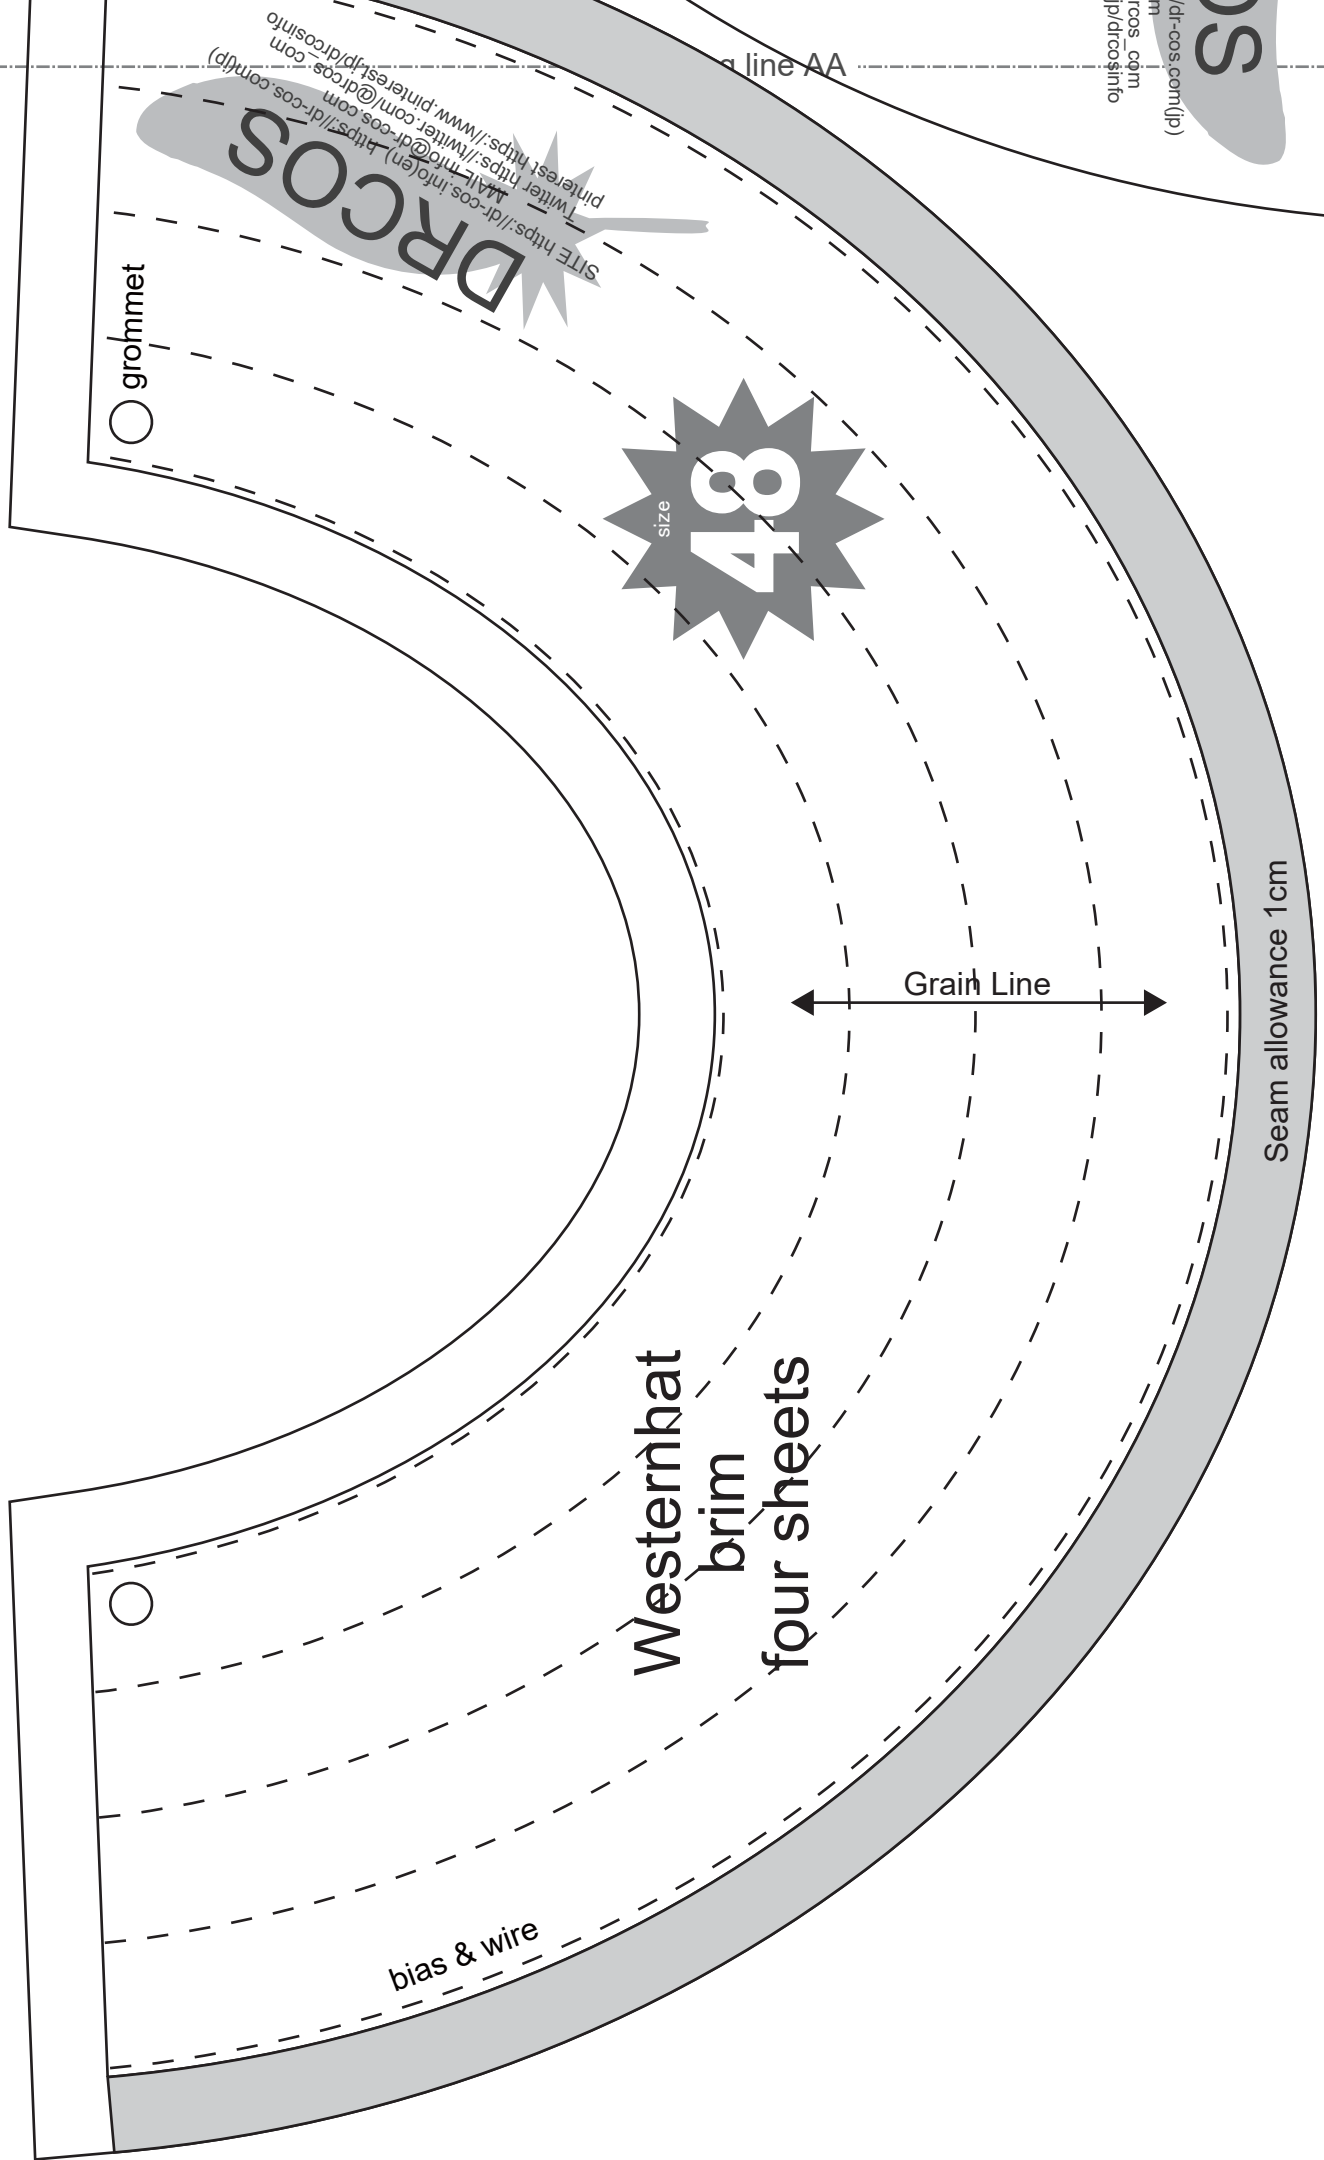

Bonding line Aa
Westernhat


top
interfacing
(heavy weight)
one sheets


Westernhat
Top
two sheets

seam allowance 1cm

Bonding line BA

size
48

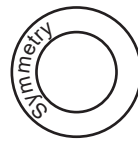

Westernhat
side
interfacing(heavy weight)
one sheets



DRCOS

SITE <https://dr-cos.info/en> <https://dr-cos.com/jp>


MAIL info@dr-cos.com

Twitter [@drcos_com](https://twitter.com/@drcos_com)

pinterest <https://www.pinterest.jp/drcosinfo>

Bonding line Ab

Bonding line Ba

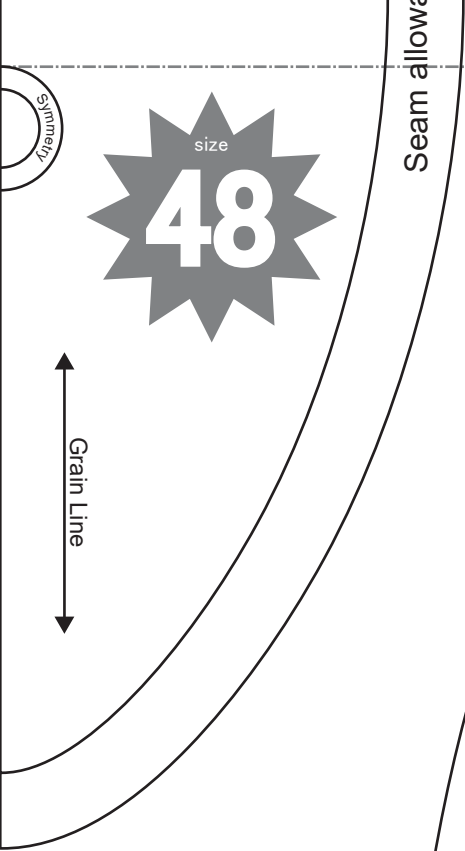

Bonding line BA



Bonding line BB

Bonding line Bb