

Westernhat 2
brim
interfacing (heavy weight)
two sheets

Please check here for the
required fabric length images,
cutting reference images,
and the step-by-step sewing instructions.
<https://dr-cos.info/tp-westernhat2.html>



DRCOS
SITE <https://dr-cos.info/en/> <https://dr-cos.com/jp/>
MAIL info@dr-cos.com
Twitter <https://twitter.com/dr-cos>
Pinterest <https://www.pinterest.jp/dr-cos/info>

Seam allowance 1/2in.

Bonding line Aa

Westernhat 2
Top
two sheets

Bonding line AA

West
interfa

DRCOS
SITE: <https://drcos.info/en/> <https://drcos.com/tp>
MAIL: info@drcos.com com@dr-cos.com
Twitter: <https://twitter.com/drcosinfo>
Pinterest: <https://www.pinterest.jp/drcosinfo>




West
interfacci

Bonding line Ab

Bonding line Aa
Grain Line

West

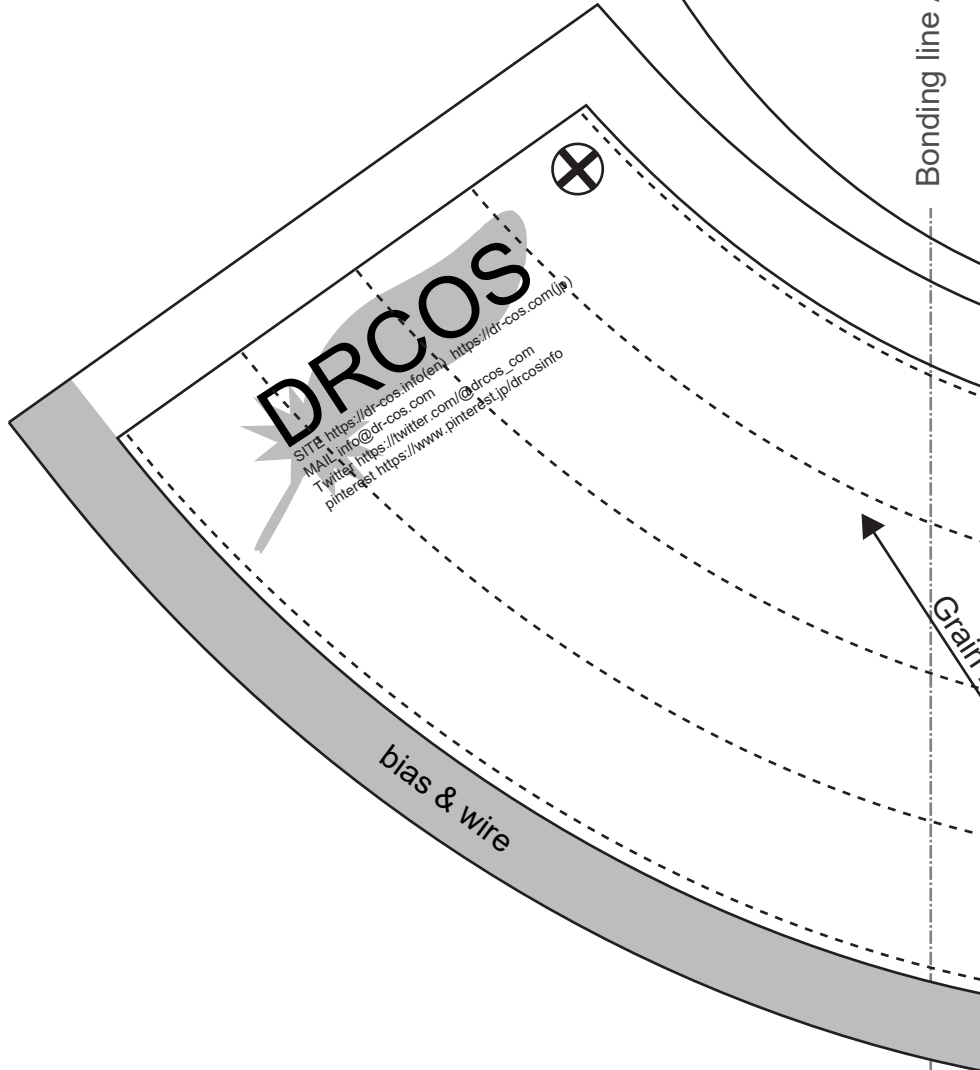

Bonding line BA

4

Westernhat 2
top
surfacing (heavy weight)
one sheets

Bonding line Ab

DRCOS

SITE <https://drcos.info/en> <https://drcos.com/jp>
MAIL info@drcos.com
Twitter [@drcos.com](https://twitter.com/drcos.com)
Pinterest <https://www.pinterest.jp/drcosinfo>

Seam allowance 1/2in.



grommet

size
54

Westernhat 2
brim
four sheets

Grain Line

Bonding line Ac

Bonding line CA

