



Please check here for the
required fabric length images,
cutting reference images,
and the step-by-step sewing instructions.
<https://dr-cos.info/tp-westernhat2.html>



Seam allowance 1 1/2 in.

Bonding line AA

Bonding line Aa

Westernhat 2
top
sheets

Bonding line AA



Westernhat 2
top
interfacing(heavy w
one sheet

Bonding line BB



DRCOS

SITE <https://drcos.info/en/> <https://drcos.com/p/>
MAIL info@drcos.com
Twitter <https://twitter.com/drcos>
Pinterest <https://www.pinterest.jp/drcosinfo>

Bonding line AB

Bonding line AB

bias & wire

Bonding line Ca

Westernhat 2
side
two sheets

Grain Line

Seam allowance 1/2in.

Bonding line AC

Westernhat 2
brim
interfacing (heavy weight)
two sheets

DRCOS
SITE <https://dr-cos.info/en> <https://dr-cos.com/p>
MAIL info@dr-cos.com
T witter <https://twitter.com/dr-cos.com>
pinterest <https://www.pinterest.jp/dr-cos/info>

Grain Line


Westernhat
Top
two sheets

size
64

Bonding line BA

Bonding line Aa

Bonding line Ab

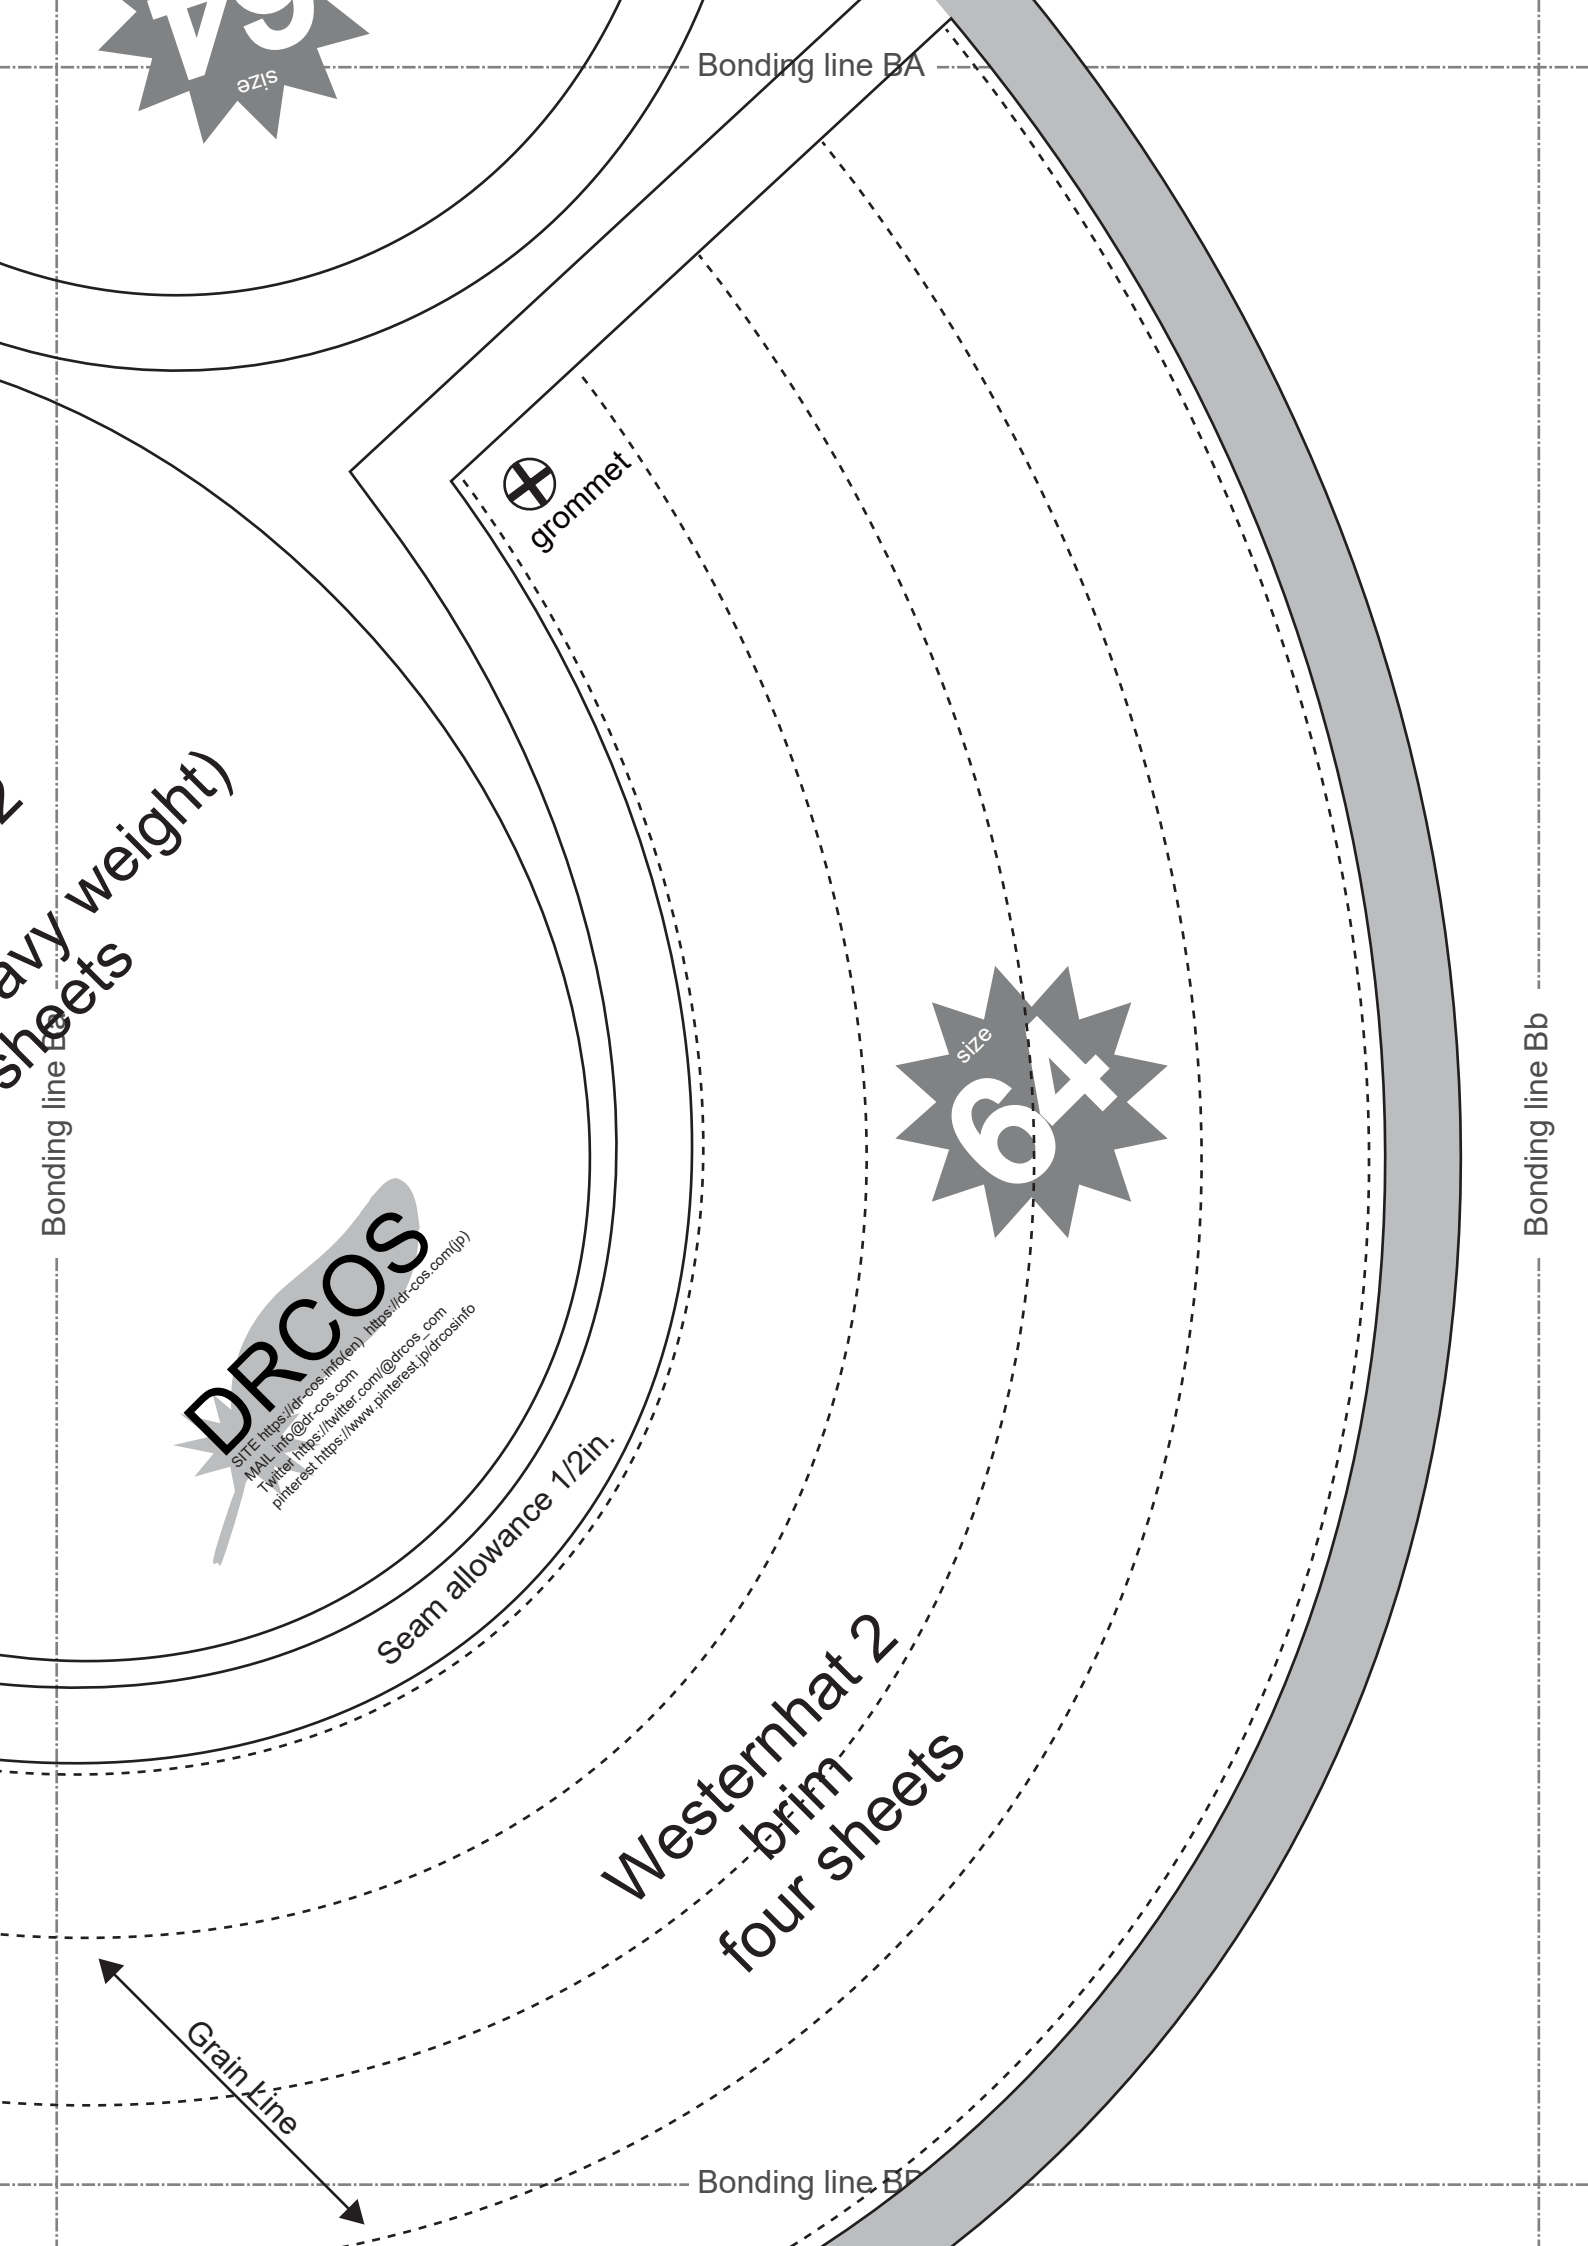

VS
size

heavy weight)
sheets

DRCOS
SITE: <https://drcos.info/en/> <https://drcos.com/ip/>
MAIL: info@drcos.com <https://drcos.com>
Twitter: <https://twitter.com/drcos>
Pinterest: <https://www.pinterest.jp/drcosinfo>

Seam allowance 1/2in.

grommet

64
size

Westernhat 2
brim
four sheets

Grain Line

Bonding line BA

Bonding line Bb

Bonding line BB

Bonding line BP

DRCOS


SITE [https://dr-cos.info\(en\)](https://dr-cos.info(en)) [https://dr-cos.com\(jp\)](https://dr-cos.com(jp))
MAIL info@dr-cos.com
Twitter [@drcos_com](https://twitter.com/@drcos_com)
pinterest <https://www.pinterest.jp/drcosinfo>

size

64

Bonding line Ca

Bonding line Cb

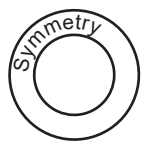

West
interfacing

Symmetry

Bonding line BC

Bonding line CB

DRCOS

SITE <https://dr-cos.info/en> <https://dr-cos.com/jp>
MAIL info@dr-cos.com
Twitter [@drcos_com](https://twitter.com/@drcos_com)
Pinterest <https://www.pinterest.jp/drcosinfo>



Bonding line Cb

Westernhat 2
side
facing (heavy weight)
one sheets

Bonding line Cc

Bonding line CC